

PLATINUM CASHBOX

Unlocking Walkthrough

Removing the cashbox




Insert your key into the top of the acceptor and turn the key 90 degrees to unlock.



Pull the blue latch backwards and lift the cashbox up from the acceptor. Slide the cashbox backwards to fully remove the cashbox from the acceptor.

Unlocking the cashbox

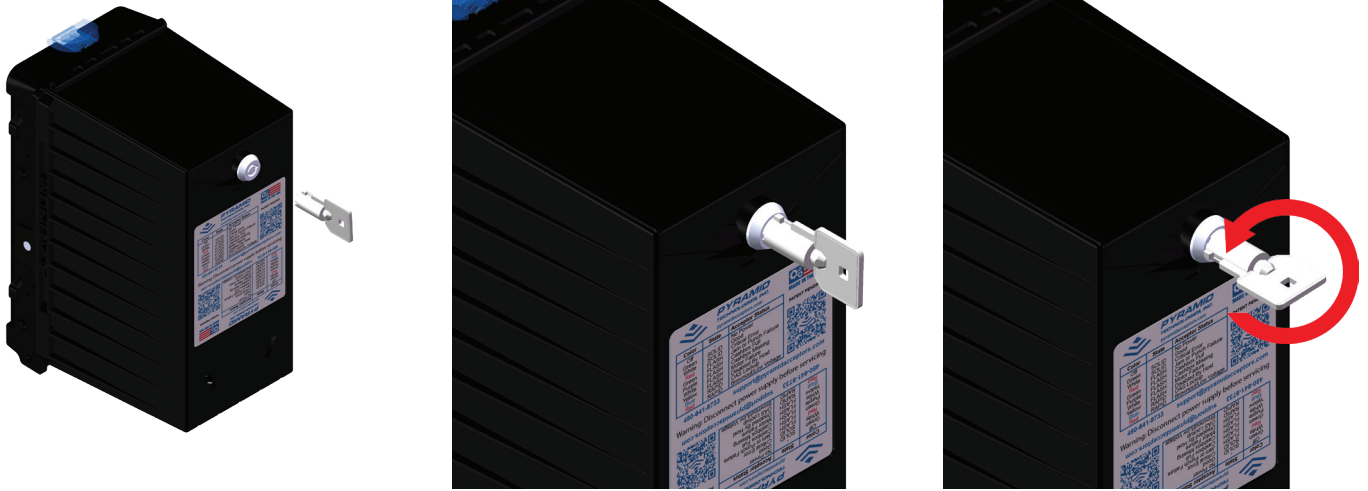

Insert your key into the back of the cashbox and turn the key 90 degrees to unlock.



Pull the top of the cashbox back to access the cash within the box.